

Work Manual

— M-1610-00IC —



Types of cards

- Management card (3 at most): Used for public and private mode, have set & delete card, unlock & lock function
- Main card (2 at most): Used for public and private mode, have unlock & lock function
- Guest card (2 at most): Used for private mode, have unlock & lock function
- Temporary card (only 1): Used for public mode, have unlock & lock function
- Mode card (only 1): Switch the mode between public mode and private mode

How to operate

Lock & unlock

The factory default mode is private mode

➤ Unlock

Use the verified card to close to inductive zone, once hear the sound of long di and green LED is on, Rotate the lock within 3s to unlock.


➤ Lock

Rotate back the lock to lock position



NOTE:

- Dididi continuous prompt sound means the card is unverified

Introduction

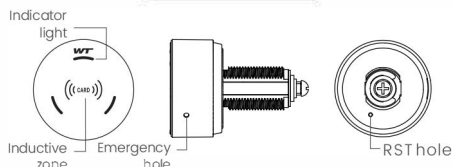

Install/replace battery

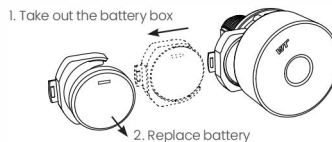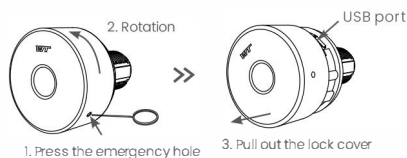

Lock & unlock

➤ Setting management card:

The factory default card database is empty, the first card you use is the management card, once you heard the sound of di means setting succeed

➤ Setting guest card:

use management card 3 times, you will see the green LED flash, and then take any other card to be added, once you heard the sound of di means setting guest card succeed

➤ Setting main card:

Use management card 4 times, you will see the green LED flash, and then take any other card to be added, once you heard the sound of di means setting main card succeed

NOTE:

- Only in the private mode, you can set the guest card & main card.

How to delete all cards

➤ Option 1:


Use management card 6 times, when you heard the sound of di and delete succeed.

➤ Option 2:

Use the pin to press the RST hole, when you heard the sound of di and delete succeed.

How to switch the mode

This lock has public mode and private mode
The factory default mode is private mode

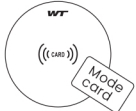

➤ Option 1: use the mode card

Use the mode card to close to inductive zone

Mode 1: You will hear a long di sound, then release the pin, now lock is in private mode.

Mode 2: You will hear three long di sound, then release the pin, now lock is in public mode



➤ Option 2: Use RST hole

Take out the batteries, put the pin into the RST hole, do not release the pin and at the same time install the batteries, please wait about 3 seconds


Mode 1: You will hear a long di sound, then release the pin, now lock is in private mode.

Mode 2: You will hear three long di sound, then release the pin, now lock is in public mode


5

Fixing hole size&installation

➤ Fixing hole unit:mm

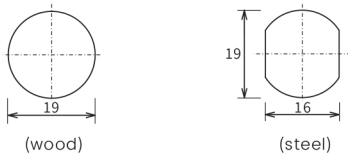

➤ Install step

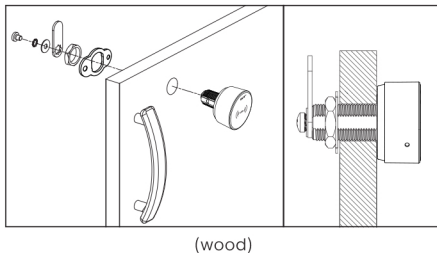

(wood)

7

Public mode

➤ Setting temporary card

Use the card to close to inductive zone, once you heard the sound means setting succeed.


➤ Unlock

Use the verified temporary card to close to inductive zone, once hear the sound of long di, the green LED to unlock, this temporary card will be invalid

NOTE:

- Before setting the temporary card, you must setting management card firstly
- Management card can unlock and delete the temporary card
- Green LED flash one time every 3 seconds means the lock has already be taken
- Temporary card can be used for 1 time only
- Dididi continuous prompt sound means the card is unverified
- When the buzzer give out Battery low voltage prompts, means battery at low voltage, please place the battery in time, the lock may not work when the voltage is low

➤ How to use the locker in the public mode

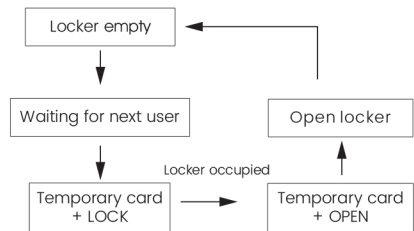

6

Features

- When the buzzer give out Battery low voltage prompts, means battery at low voltage, please place the battery in time, the lock may not work when the voltage is low
- Emergency power supply
When the battery is in low voltage condition, you can connect the USB port with an external power supply

NOTE:

- Before setting the temporary card, you must setting management card firstly
- Management card can unlock and delete the temporary card
- Green LED flash one time every 3 seconds means the lock has already be taken
- Temporary card can be used for 1 time only
- Dididi continuous prompt sound means the card is unverified
- When the buzzer give out Battery low voltage prompts, means battery at low voltage, please place the battery in time, the lock may not work when the voltage is low

➤ How to use the locker in the public mode

Working temperature	-20~+55°C	Factory default mode	Private mode
Working humidity	10%~85%RH	Static current	30uA
Storage temperature	-40~+55°C	Dynamic current	130mA
Power supply	CR2450	Batteries life time	1 year

8